

Contents

- Table of Figures.....2**
- 1 IFU Software for WinNT Installation.....3**
 - 1.1 General.....3*
 - 1.1.1 Scope of Validity3
 - 1.1.2 Maintenance Concept.....3
 - 1.1.3 Release Notes and Related Documents.....3
 - 1.1.4 Software Kits.....4
 - 1.1.5 Network Addresses, Host name, and Network Adapter settings.....4
 - 1.2 Installation Procedure8*
 - 1.2.1 Initial Installation (Base Kit or Complete Kit).....8
 - 1.2.2 Subsequent Installation (Base Kit or Complete Kit).....10
 - 1.2.3 Changing NT settings12
 - 1.2.4 Application Kit Installation13
 - 1.2.5 Changing Application Settings.....22
 - 1.2.6 Restarting the Interface Process (ifp)22
 - 1.2.7 Final Work.....23
 - 1.3 Description of Installation Menu.....23*
 - 1.3.1 Preparations, Installation Concept.....24
 - 1.3.2 Menu Item A: Install Basic SW on 1st Drive25
 - 1.3.3 Menu Item B: Backup 1st Partition26
 - 1.3.4 Menu Item C: Clone First Drive to Second Drive.....26
 - 1.3.5 Menu Item D: Restore First Partition27
- 2 SERMON1000 Installation Procedure28**
 - 2.1 Procedure.....28*

