


**Fig 33: Procedure & illustration sample**

## 1.1 Peripherals

**Figure 1: Multi-Port Adaptor**

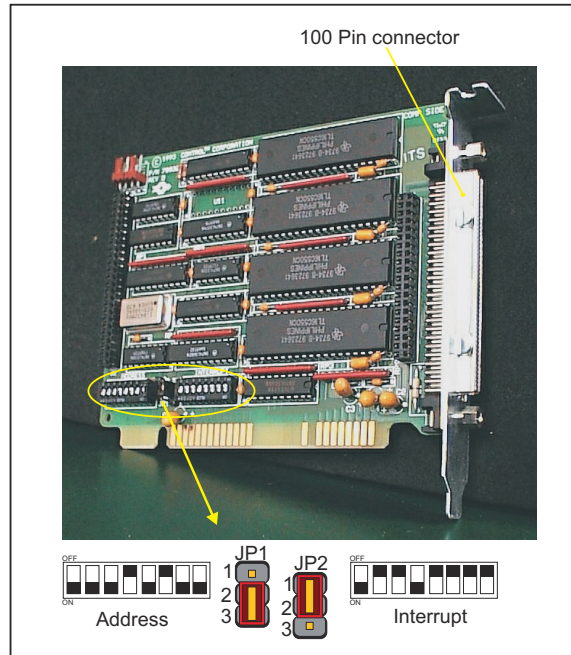

When Working on Electrical Components

- When working on the machine, make sure you observe the instructions on safety detailed at the beginning of this unit.

### Keyboard, Monitor and Printer Removal

- 1 Power-down the NP 4000.
- 2 Remove power from the Master Controller.
- 3 Disconnect the cables and remove the peripheral unit

### Keyboard, Monitor and Printer Installation

- 1 Connect the data cables and mains power cable were appropriate.
- 2 Power-up the NP4000.
- 3 Use the Diagnostic Menus to verify proper operation of the peripherals.

March 2003 